


2.25" Button Maker #13716010& 3" Button Maker #13716020Important NotesREAD BEFORE OPERATING

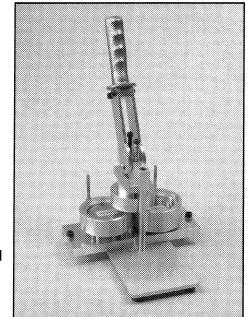

@canadianlibrarysupply.ca Search: 1371601 Email info@canadianmuseumlibrary.ca

IMPORTANT NOTES READ BEFORE OPERATING



- 1. Adjustable Rotary Cutter has been pre-set at factory. Please test on material to make sure blade is correct and has not changed position. Always rotate in a clockwise motion. Cutting size is 2 5/8" dia. for a 2 1/4" button and 3 1/2" for a 3" button. Correct location is marked by black dots. **CAUTION SHARP BLADE**. Please refer to 998 general instructions for changing of blade.
- 2. Model #913 MM and #9014 Mini Button Machines are designed to assemble metal buttons using light weight graphic/ computer paper and photo paper only. It is not equipped to assemble a heavier weight paper.
- 3. Your machine has been fully tested at our factory and should perform well. If problems occur due to damage during shipping or improper use please call for assistance. Any attempt to disassemble the machine voids the limited warranty.