


Caster Installation Instructions

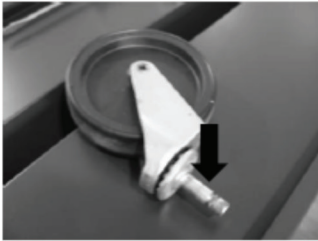

Caster shaft



Caster insert

1. Insert caster shaft into caster insert on bottom of leg until it stops.



2. Put palm of hand over base of caster and push down until caster shaft seats into caster insert. Note: there should be an audible click when caster shaft is completely seated into caster insert.



Do not attempt to seat the caster shaft by grasping the caster wheel and pushing down. The caster wheel is offset and will not generate sufficient pressure to seat the caster shaft into the caster insert.



3. If unable to seat caster shaft using the palm of your hand, position blade of a long screwdriver onto head of caster shaft. Gently tap top of screwdriver with rubber mallet until caster shaft seats completely into caster insert.



Do not strike the caster wheel with a mallet, as this will result in damage to the wheel and/or book truck leg.

